



Before first use: Inspect product carefully before use

Wash and rinse each part separately and thoroughly.

Cleaning and care instructions: This product may be cleaned by hand

- with gentle detergent or in a dishwasher on top rack only. 2. After each use, separate all the parts, wash
- and rinse thoroughly 3. Soft spout should be cleaned with
- running water to remove any residue Avoid using abrasive pads or cleaners and do not clean with, or allow to come into contact with solvents or harsh chemicals,
- as these could cause damage to this product. Excessive concentrations of detergents 5 may in the long run, cause the breakdown of plastic accessories. If this happens,
- replace them immediately. 6. Always wash the product immediately
- after each use. 7. Wash your hands thoroughly and make sure that all surfaces are clean before
- putting the parts sterilized 8.
- Do not boil, steam or microwave sterilise. 9. Do not leave in sunlight when not in use.

For your child's safety and health: WARNING!

- When using never leave your child unattended.
- Use the product under the supervision 2 of an adult person who can ensure the safety of the child.
- Never use the baby bottle teats as a 3 soother.
- Continuous and prolonged sucking of 4 fluids can cause tooth decay.
- 5 Always check the temperature of the milk or the drink before giving it to baby. 6. Keep all unused parts out of the re
- of children. 7. Do not expose your teats to sunlight or heat when not in use, may deteriorate.
- Always check the product thoroughly 8. before use. Replace the part at the first signs of deterioration To control the product, pull the nipple 9
- in different directions to check the resistance. 10. DO NOT heat the contents in the
- microwave, as it may heat unevenly and cause burns. 11. For hygienic reasons, we recommend changing the teats and spouts after 3
- months 12. DO NOT over tighten the nut on the bottle.
- 13. Not suitable for use with hot liquids.
- 14. Not suggested for use with carbonated (fizzy) drinks or juices with pulp.
- Ensure lid is securely fastened in position.
- 16. Store in a dry teats and closed.
- Do not boil, steam or microwave sterilise. 18. DO NOT let your child play with small
- parts or run and walk holding bottles. 19. Drinks are not recommended other tha milk and water, such as fruit juices or soft drinks. If you are using, you should dilute and give the child only for limited periods, avoiding the drink constantly.
- 20. Use only the teats and accessories from the same manufacturer.
- 21. May break if dropped onto a hard surface.
- This product is not a toy, never give 22. directly to your child, store safely out of children's reach when not in use.

Please read the instructions carefully and keep the packaging for future refer