



- IT** Video baby monitor
- ES** Monitor de videovigilancia para bebés
- EN** Video baby monitor
- FR** Moniteur vidéo pour bébé
- DE** Video-Babyphone
- PT** Monitor de bebé de vigilância por vídeo
- GR** Μωρό μόνιτορ βίντεο
- NO** Video babymonitor

# VIDEOVOICE 360



3045

- IT** Manuale istruzioni d'uso
- ES** Manual de instrucciones
- EN** Instruction manual
- FR** Manuel d'utilisation

- DE** Bedienungsanleitung
- PT** Manual de instruções
- GR** Εγχειρίδιο οδηγιών
- NO** Bruksanvisningen

**Congratulation!**

Now you can take care of your babies anywhere and anytime. Please read the user manual before use. Keep your original purchase receipt. For warranty service on your baby monitor, you will need to provide a copy of your purchase receipt to confirm warranty status. Before using the product, it is recommended to fully charge the battery in the parent unit. Please read the Safety instructions.

**1. SAFETY INSTRUCTIONS**

**CAUTION: Keep small parts away from children.**

**Strangulation Hazard:** Children can become entangled in cords. Power cords should be kept more than 1 metre away from the crib and baby's reach all the time. Baby monitors and cameras with power cords should never be hung on or near the crib. This product is not a toy and should be kept out of children's reach. This product contains small parts. Be careful not to lose them when opening and assembling the product.

**Read and keep instructions:** All safety and operating instructions must be read before the video baby monitor is used. This product cannot replace responsible adult supervision.

**Water and moisture:** This product is designed for indoor use only. The unit should not be exposed to rain, moisture, dripping or splashing. No objects filled with liquid should be placed on top of, or beside the product, such as a glass or vase. This item should not be used near water.

**DO NOT USE THE APPLIANCE:**

- If the cord or plug is damaged.
- If your baby monitor is not operating properly or has suffered any damage.

Contact the service centre to request a check and repair to avoid any risks.

**DO NOT** open the baby monitor to attempt to repair it or to adjust any of the electrical or mechanical functions of the unit, otherwise the warranty will be void.

**Ventilation:** This baby monitor should not be used on a bed, sofa, rug or similar surface that may block the ventilation openings, or be placed in an enclosed area, such as a bookcase or drawer that may impede air flow.

**Keep away from heat sources:** This unit should not be exposed to direct heat sources such as a candle, radiator, heater, stove or other appliance that emits heat. The unit should not be left in direct sunlight.

**Power source:** This unit should only be used with the adapter included in this package.

**Damage requiring service:** This unit should be serviced by qualified personnel.

**WARNING:**

**IR emitted from this product. Do not stare at operating lamp!**

**WARNING:**

**Keep the small parts away from children. The features described in user's manual are subject to modifications without prior notice.**

**CAUTION:**

 
**RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE. DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS.**

## 2. PRODUCT OVERVIEW



x1

Parent unit

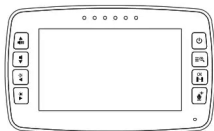

x1

Baby Unit

 


x2

Power adapter





x1

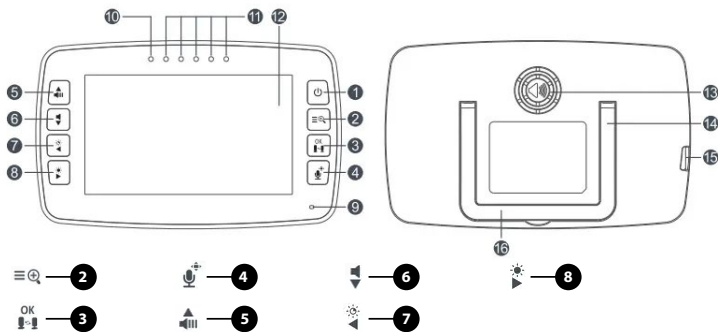

- |                             |                                    |
|-----------------------------|------------------------------------|
| 1. POWER KEY                | 9. MIC                             |
| 2. MENU/ EXIT               | 10. POWER & CHARGING INDICATOR LED |
| 3. OK KEY                   | 11. VOLUME LED                     |
| 4. PAN& TILT / TALK TO BABY | 12. LCD SCREEN                     |
| 5. VOLUME +/ UP KEY         | 13. SPEAKER                        |
| 6. VOLUME -/ DOWN KEY       | 14. STAND                          |
| 7. BRIGHTNESS -/ RIGHT KEY  | 15. RESET KEY (UNDER THE STAND)    |
| 8. BRIGHTNESS +/ LEFT KEY   | 16. DC-JACK                        |

### ICONS OVERVIEW

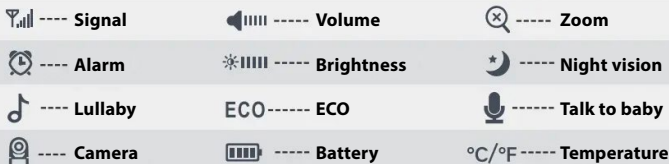 

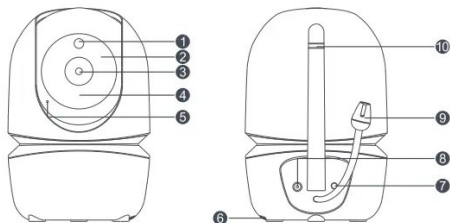 

1. LIGHT SENSOR
2. INFRARED LEDS
3. CMOS SENSOR
4. POWER LED
5. MIC
6. SPEAKER
7. PAIR KEY
8. DC-JACK
9. TEMPERATURE SENSOR
10. ANTENNA

### 3. USING THE BABY MONITOR

#### CHARGING AND POWERING THE MONITOR UNIT

##### Step 1:

Charge the monitor by connecting the power adapter included in this package to the monitor and a socket. (It takes about 4 hours for the monitor to be fully charged).

##### Step 2:

Use the provided power adapter included in this package to connect the wall outlet with the baby unit.

##### Note:

- Place the camera at least 1m away from your child. Gently press and hold the power button for 3 seconds to turn on the monitor. Now you can see the image taken by the camera.
- Adjust the sound, brightness and reasonable positioning of the camera as you like.

 
##### Tips:

To use the baby monitor, you must be able to establish a radio connection between the monitor and the camera. Distance may be affected by environmental conditions:


- Any large metal objects, such as a refrigerator, mirror, cabinet, metal doors or reinforced concrete between the child and the parent unit can block the radio signal. Signal strength can also be reduced by other solid structures, such as walls, or by radio or electrical equipment, such as TVs, computers, cordless or cell phones, fluorescent lights or dial switches, or even Wi-Fi systems.
- When using other 2.4 GHz products, such as wireless networks (Wi-Fi routers), Bluetooth systems or microwave ovens, interference may occur with this product, so keep the baby monitor at least 1,5 m away from these types of products.

Charging: Red  
Fully charged: Green

STEP 1

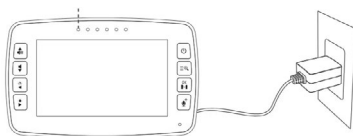

 STEP 2

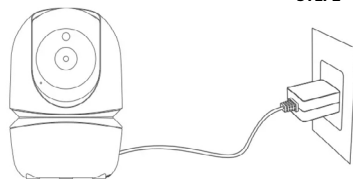

## NIGHT VISION MODE

When the built-in photo sensor detects a low level of ambient light, the screen on the monitor unit will display in black and white the “**NIGHT VISION icon**” on the screen.

## PAN AND TILT

The camera unit can be remotely controlled from the monitor unit

**Step 1.** Press the “**PAN/TILT key**” and enter the Pan/Tilt mode.

**Step 2.** Press the “**UP key**” or “**DOWN key**” to tilt upward or downward.

**Step 3.** Press the “**LEFT key**” or “**RIGHT key**” to Pan left or right.

**Step 4.** Press the “**PAN/TILT key**” exit the Pan/Tilt mode.

**Note:** During the Pan/Tilt mode the navigation key can not be used to adjust volume and Brightness.

## TALK MODE

Press and hold the “**TALK TO BABY key**” on the monitor unit to talk to your baby through the camera unit’s loudspeaker. The “**TALK TO BABY icon**” will be displayed at the bottom right corner of the screen.

## DIGITAL ZOOM

**Step 1.** Press and hold the “**MENU/EXIT key**” for around 2 seconds enter Zoom mode.

**Step 2.** At the Zoom mode, press the “**PAN/TILT key**” to adjust the direction of the camera/image.

**Step 3.** Press the “**LEFT key**” to pan left; Press “**RIGHT key**” to pan right; Press “**UP key**” to tilt up; Press “**DOWN key**” to tilt down.

**Step 4.** Press and hold the “**MENU/EXIT key**” again around 2 seconds to operate Zoom out. During digital zoom mode the zoom icon will be displayed on the top of screen.

**Warm reminder:** If you want to adjust the Volume/Brightness you have to exit the Pan/Tilt (press Pan/Tilt key) mode before you operate it.

## SCAN AND SWITCH THE CAMERAS

Press “**OK key**” for 2 seconds to view the first camera, during the scan mode, the “**CAMERA icon**” will be displayed on the top of the scene. Each camera’s video will stay on the screen for around 10 seconds then change to the next camera. Short press the scan key again to switch the camera under the scan mode.

**Note:** This function is only available when two or more cameras are paired.

---

## 4. MENU OPERATION

### LULLABY SETTING

You can soothe the baby to sleep by playing a gentle lullaby from the baby unit.

 
**Step 1:** Press “**MENU/EXIT key**” and the menu will display;

**Step 2:** Press the “**LEFT key**” or “**RIGHT key**” until the lullaby icon is highlighted;

**Step 3:** Press the “**UP key**” or “**DOWN key**” to select the lullaby you need;

**Step 3:** Press the “**UP key**” or “**DOWN key**” to select the Playback time and volume;

**Step 4:** Press “**OK key**” to confirm.

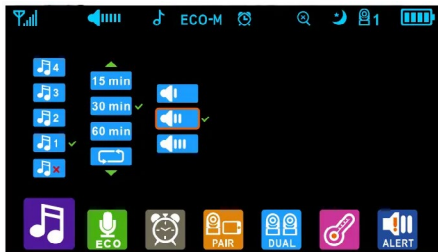

## ECO MODE SETTING

This mode allows you to control the audio activation of the baby monitor. When the ECO default setting is on, if there is no sound around the camera within 30 seconds, the baby unit will stop transmitting. The monitor screen turns off when the camera is not transmitting. When the camera detects that the sound is louder than the pre-set sensitivity level, it will start transmitting the signal again. To change the sensitivity level:

 
**Step 1:** Press “MENU/EXIT key” and the menu will display;

**Step 2:** Press the “LEFT key” or “RIGHT key” until the ECO icon is highlighted;

**Step 3:** Press the “UP key” or “DOWN key” to select the desire level;

**Step 4:** Press “OK key” to confirm.

**Note:** “LOW” High volume of sound is required to reactivate the transmission; “MED” Medium volume of sound is required to reactivate the transmission; “HIGH” Low volume of sound is required to reactivate the transmission; “X” No standby mode.

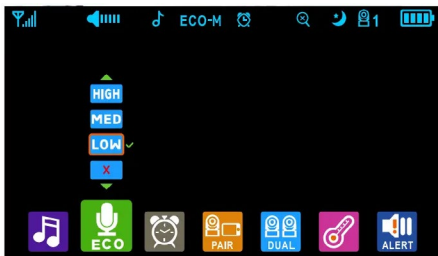


## DUAL VIEW SETTING

**Step 1:** Press “MENU/EXIT key” and the menu will display;

**Step 2:** Press the “LEFT key” or “RIGHT key” until the DUAL icon is highlighted;

**Step 3:** Press the “UP key” or “DOWN key” to select the single or dual view display;

 **Step 4:** Press the “OK key” to confirm.

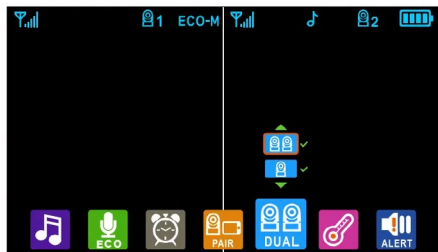

## PAIRING THE CAMERA AND MONITOR

 
**Step 1:** Press “MENU/EXIT key” and the menu will display;

**Step 2:** Press the “LEFT key” or “RIGHT key” until the “PAIR icon” is highlighted, then press the “UP key” or “DOWN key” to select the baby unit to pair;

**Step 3:** Press the “OK key” to start the pairing;

**Step 4:** While the LED is flashing, press and hold the PAIR button on the back of the baby unit, once paired, the screen will display the image from the baby unit;

**Step 5:** If failed, please repeat the steps above.

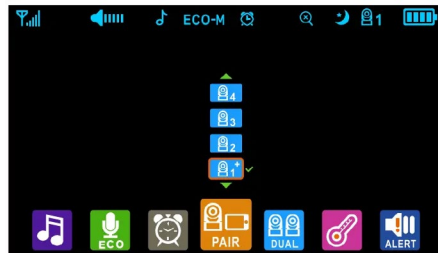

## FEEDING TIMER SETTING

You can use the alarm to remind yourself to feed baby/change diapers/sleep, etc.

**Step 1:** Press “MENU/EXIT key” and the menu will display;

 
**Step 2:** Press the “LEFT key” or “RIGHT key” until the alarm icon is highlighted;

**Step 3:** Press the “UP key” or “DOWN key” to select desired alert time;

**Step 4:** Press the “OK key” to confirm.

**Note:** If the alarm is ringing and no one answers, then the ring will last for 1 minute; after 3 minutes the ringing will start again.

The alarm will ring for 3 times in total, after this the alarm goes off. Once the alarm is turned on, “ALARM icon” will displayed on the Screen.

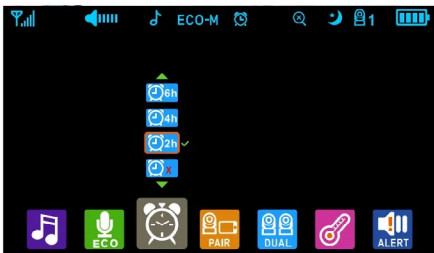

## TEMPERATURE UNIT SETTINGS

 
The reading from the temperature sensor will be displayed at the top of the parent unit screen. To change the temperature display from °C to °F, please follow the next instructions:

**Step 1:** Press “MENU/EXIT key” and the menu will display;

**Step 2:** Press the “LEFT key” or “RIGHT key” until the temperature icon is highlighted;

**Step 3:** Press the “UP key” or “DOWN key” to select °C or °F;

**Step 4:** Press the “OK key” to confirm.

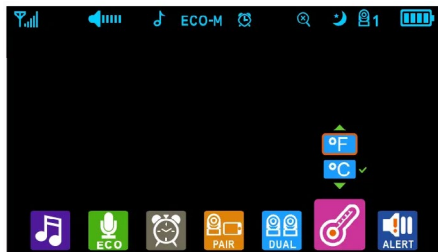


## ALERT VOLUME SETTING

**Step 1:** Press “MENU/EXIT key” and the menu will display;

**Step 2:** Press the “LEFT key” or “RIGHT key” until the ALERT icon is highlighted;

**Step 3:** Press the “UP key” or “DOWN key” to select the desire level;

 **Step 4:** Press the “OK key” to confirm.

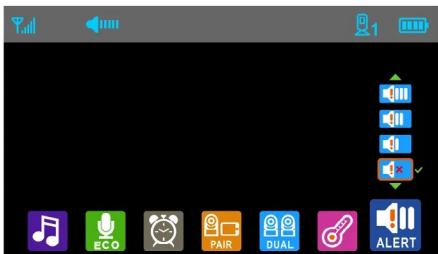

## 5. TECHNICAL DATA

Frequency	2.4GHz FHSS
Operation Environment	Indoor use only; Temperature: 040 °C; Humidity: 5%-90% rh.(relative humidity)
Operating Range	Up to 300 meters (straight line and open space)
Power adapter	Input: 100-240VAC 50/60Hz, 300mA Max Output: 5V,1A
LCD	4.3" LCD Screen
Rechargeable battery for monitor	Model: 503450; 3.7V, 2100 mAh
Operating time with battery fully charged (parent unit)	Up to 12 hours (VOX on)
Image sensor type	1/6.5" Color CMOS image sensor
IR LED type	940 nm

### DISPOSAL OF THE DEVICE (ENVIRONMENT)

At the end of the product life cycle, you should **NOT** dispose of this product with normal household waste. Take this product to your local collection point for the recycling of electrical and electronic equipment. The symbol on the product, user's guide and/or box indicates this. Some of the product materials can be reused if you take them to your local recycling point. By reusing some parts or raw materials from used products you make an important contribution to the protection of the environment. Please contact your local authorities in case you need more information on the collection points in your area. The internal battery should be disposed in an environmentally-friendly manner according to your local regulations.

**SERVICE:** Every care has been taken in the realisation of products, accessories provided in the box and documentation provided, so in case of problems it is advisable to repeat the operations by faithfully following the instructions in the manual. For further information on the help service visit the website: [www.nuvitababy.com](http://www.nuvitababy.com)

**WARRANTY - TERMS AND CONDITIONS:** This product benefits of a warranty of 24 months on material and manufacturing defects, starting from the date of purchase (see sales slip). The warranty of 24 months does not include damages caused by the usual use of parties identified as "consumable" (e.g., batteries, brush heads or parts subject to usury). **The legal guarantee of 24 months is void if:** 1) The product has undergone aesthetic damage due to improper use not in accordance with instructions in the manual. 2) This product has been modified and/or tampered with. 3) The cause of the failure was due to poor maintenance of the individual components and/or accessories and/or supplies (e.g. oxidation and/or scaling due to the retention of water or other liquids, sediment blocking the sensor, leak of corrosive liquid from batteries). **The following is excluded from the legal guarantee of 24 months:** 1) Costs related to replacements and/or repair of parts subject to wear or costs for ordinary maintenance of the product. 2) The costs and risks involved in transporting the product to and from the store where you purchased or otherwise authorized collection centre to receive the products under warranty. 3) Damage caused by or resulting from improper installation or improper use not in accordance with the directions in the instruction manual. 4) Damage due to natural disasters, accidental events or adverse conditions not compatible with the product. 5) Defects that have a negligible effect on product performance. The manufacturer, distributor and all the parties involved in the sale do not assume any liability for losses and economic damage from any malfunction of the product. In accordance with current regulations the manufacturer, distributor and all the parties involved in the sale are not responding in any case for damages, including direct, indirect ones, loss of net income, loss of savings and additional damage and other details consequences going beyond the damage caused by the breach of warranty, contract, strict liability, wrongdoing or due to other causes, resulting from the use or inability to use the product and/or paper and electronic documents, including the lack of service.



## 6. TROUBLE SHOOTING

No reception on the monitor	<ul style="list-style-type: none"><li>• The power adapters may not be properly connected.</li><li>• Check that the camera and monitor are ON.</li><li>• Camera may be far away from the monitor.</li><li>• Camera and monitor may not properly paired, follow PAIRING instructions.</li><li>• Restart baby unit and parent unit.</li><li>• Press the reset key at the back of parent unit.</li></ul>
Interference or poor reception	<ul style="list-style-type: none"><li>• Move the monitor close to the camera.</li><li>• The camera or monitor may be placed too close to many metal objects.</li><li>• Other electronic devices may be interfering with the signal.</li><li>• The battery power may be too low.</li><li>• Restart baby unit and parent unit.</li><li>• Press the reset key at the back of parent unit</li></ul>
Feedback (screeching, static)	<ul style="list-style-type: none"><li>• The camera and monitor may be too close together.</li><li>• The volume on the monitor may be set too high. Press the reset key at the back of parent unit.</li></ul>
Cannot hear the baby on the parent unit	<ul style="list-style-type: none"><li>• Volume setting may be too low.</li><li>• Press the reset key at the back of parent unit.</li></ul>
Image frozen	<ul style="list-style-type: none"><li>• Restart the baby unit(plug out the adapter then plug it into the socket again).</li><li>• Press the reset key at the back of parent unit(hide behind the stand).</li></ul>



**www.nuvitababy.com**  
info@nuvitababy.com

**IMPORTED / DISTRIBUTED BY**  
Anteprima Brands International Ltd  
1, Ferris Bldg. St.Luke Street PTA1020 Gwardamangia  
Malta - Europe

All rights reserved  
3045\_23\_Gen\_v1.0.0

