



Cleaning and care instruction: This product may be cleaned by hand with gentle detergent or in a dishwasher on top rack only. After each use, separate all the parts, wash and rinse thoroughly. Avoid using abrasive pads or cleaners and do not clean with, or allow coming into contact with solvents or harsh chemicals, as these could cause damage to this product. Excessive concentrations of detergents may in the long run, cause the breakdown of plastic accessories. If this happens, replace them immediately. Always wash the product immediately after each use. Do not boil, steam or microwave sterilise. **Please read the instructions carefully and keep the packaging for future reference.**